
Resistance thermometer **TYPE NS**

Tank Thermometer

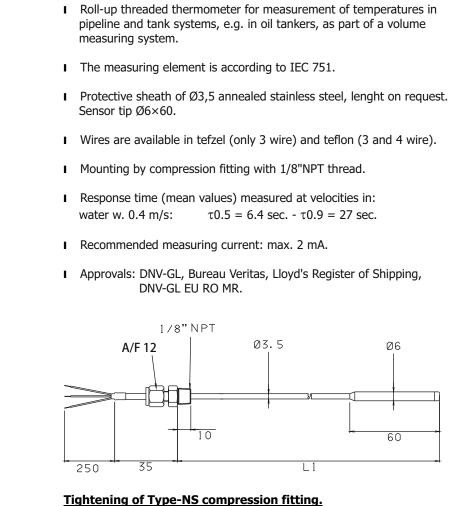

Tightening of Type-NS compression fitting. Tighten the compression part with a torque of 16 Nm.

If tightened more times use a torque wrench and tighten with 16 Nm.



Ordering: See ordering form on back page




T

PERFECT YOUR PERFORMANCE WITH EXPERTISE

 


ORDERING FORM / RESISTANCE THERMOMETER TYPE NS

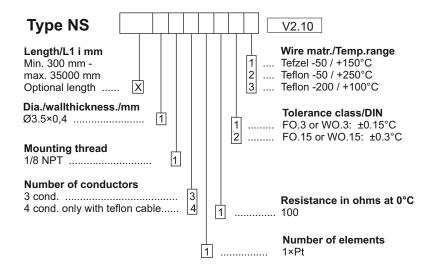

*) Not used as standard - only on special request

Connection diagram:



Head office:

Senmatic A/S Industrivej 8, 5471 Søndersø, Denmark Phone: +45 64 89 22 11 dk@senmatic.com - www.senmatic.com